

#4020 AND #4040 SOAP DISPENSERS



INSTALLATION AND MAINTENANCE INSTRUCTIONS FOR TANK-TYPE DISPENSERS

1. Locate position on wall where dispenser is to be mounted. TOP OF DISPENSER WILL HAVE APPROXIMATE POSITION ON TOP OF WALLPLATE. (Allow room for filling dispenser.)
2. Mount wallplate in vertical position with WIDE OPENING OF "V" at TOP. Use Rawl plugs for tile and marble walls. For plaster or hollow walls, use round-head toggle bolts or molliers.
3. Slide dispenser over the V wallplate so that the grooves in back of tank catch inside of the wallplate. PRESS TANK DOWN FIRMLY.
4. Remove the filler cap in top of tank by using furnished special service key. (Rotate cap 1/4 turn in either direction.)
5. Insert screwdriver through the filler cap holes from front of tank. Engage the slotted screw head (located in center back of tank 1" down from top) and tighten securely! This will lock the tank onto the wallplate. (Leakage is prevented by the washer under the screw head -- therefore make sure this screw is tightened well.)
6. Fill the dispenser with any good grade of liquid soap. (For lather unit, use a 10-20% grade of liquid soap.)

NOTE: To clean the outside of the dispenser, use a Scouring Pad or an equivalent cleaning pad with a gentle liquid soap. Move the pad in the same direction as the grains you are cleaning the stainless steel tank. CLEAN THE SPOUT and valve surfaces everyday.

Should the dispenser fail to operate, the dispenser should be removed from the wallplate (loosen screw in step above) and flushed with hot water. This should remove any dried soap or dirt that may have clogged the valve mechanism.

IMPORTANT: Locate dispenser above sink or counter. Recommended never locating where spillage can fall on floor, creating a hazardous condition. We cannot be responsible for damage or injury due to improper installation.