 


INSTRUCTION SHEET

1. HANDLE ASSEMBLY

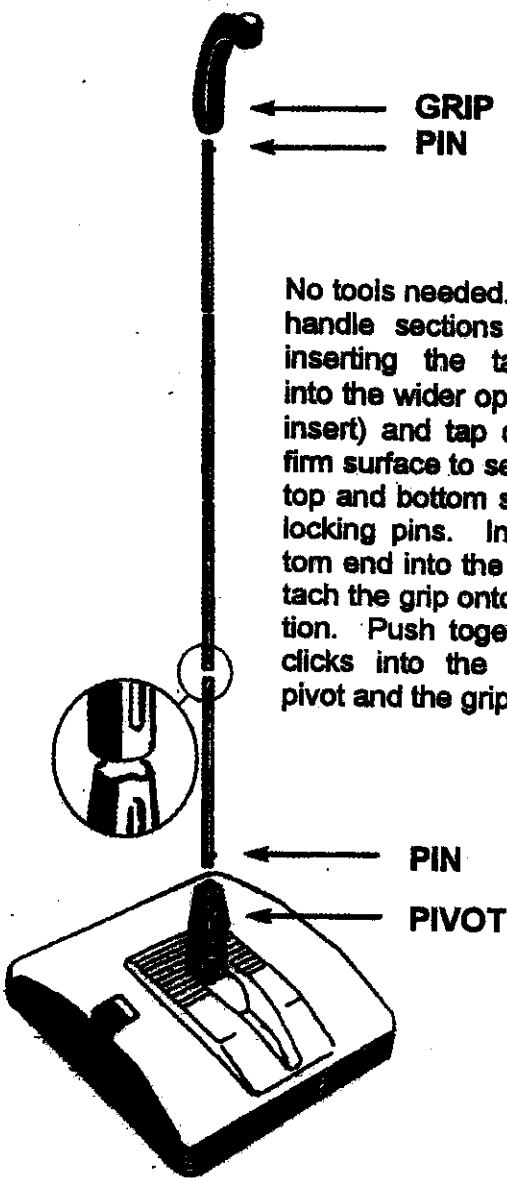


No tools needed. Put the four handle sections together by inserting the tapered ends into the wider open ends (see insert) and tap on ground or firm surface to secure fit. The top and bottom sections have locking pins. Insert the bottom end into the pivot and attach the grip onto the top section. Push together until pin clicks into the hole on the pivot and the grip.

2. HOW TO USE

Push sweeper in forward and backward motion to remove dirt on many floor surfaces.


NOTE - Empty when surface dirt becomes difficult to remove.

3. DIRT DISPOSAL

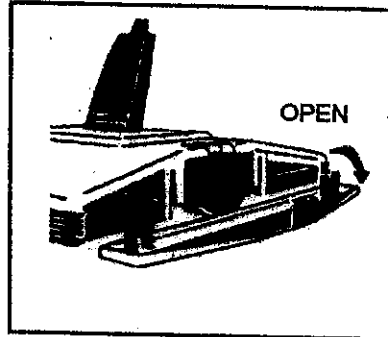

To empty dirt- open side door and shake over waste container.

4. HOW TO USE THE BRUSH COMB*

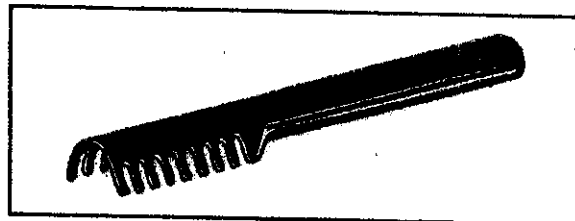

* Not available on all models.

Use the handy comb across the brush roll to remove remaining particles.

The comb snaps easily on the handle for convenient storage.

5. EASY STORAGE

The sweeper folds flat against the wall when hung from the hole in the handle grip.

6. WARRANTY

All models have a 90 day commercial warranty. All models have a 1 year household warranty.