


# Instruction for valve kit changing

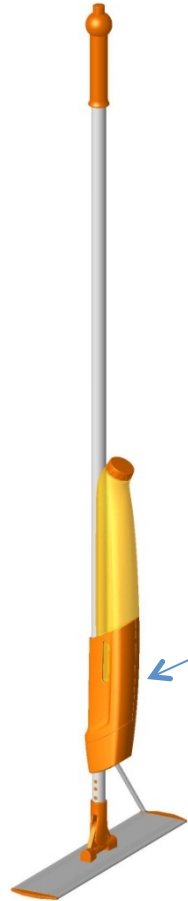


Unscrew 6 screws on body, 4 screws on front, one in bottom and last one inside.

A complete product



# #1: Take off 5 screws on the body

Pls see 5 screws location below:

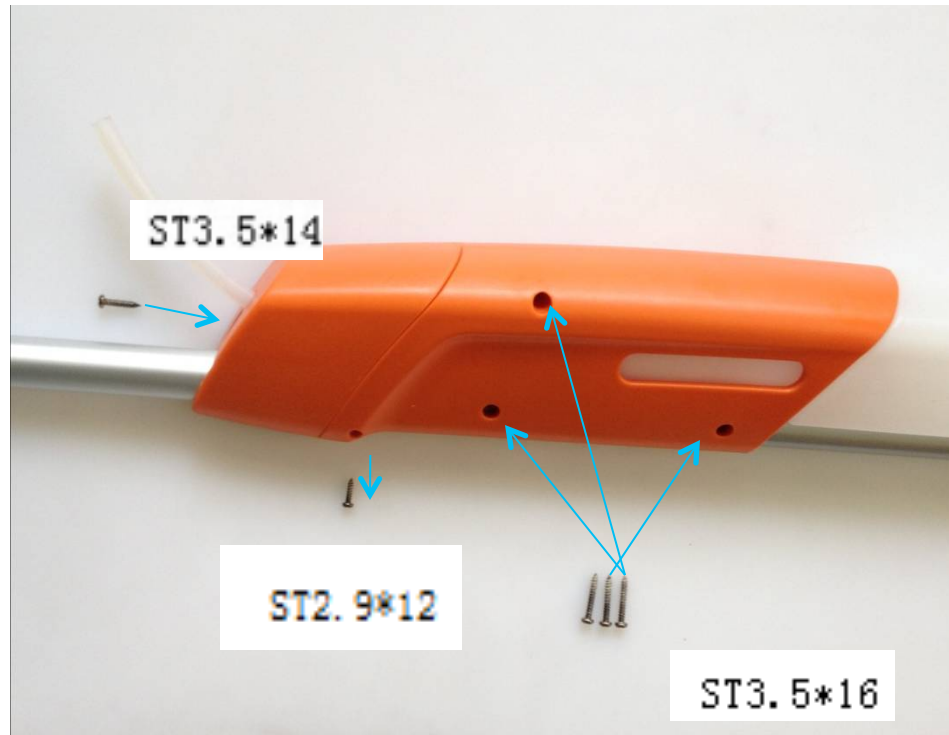


## #2: Take off the bottom part and open left and right body

Separate the bottom

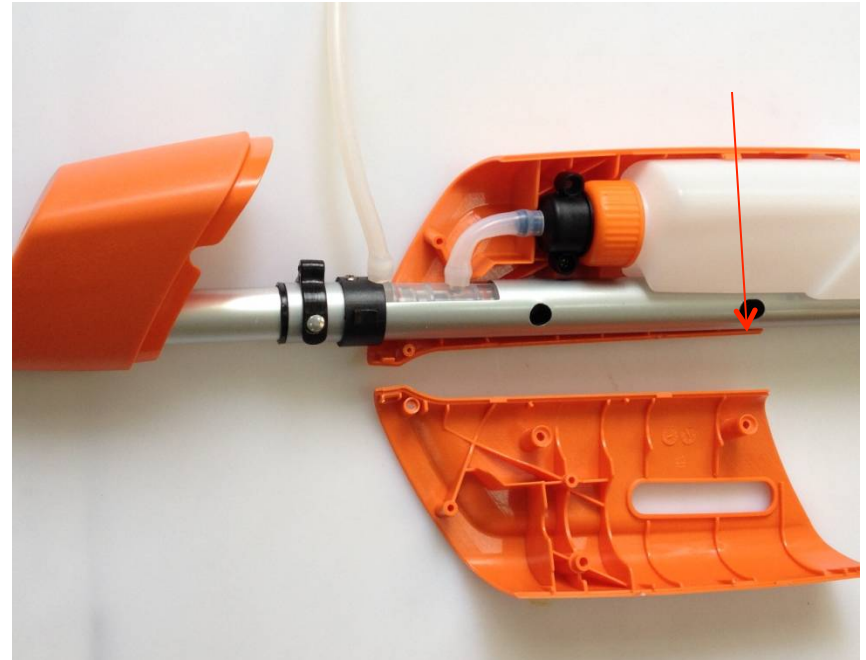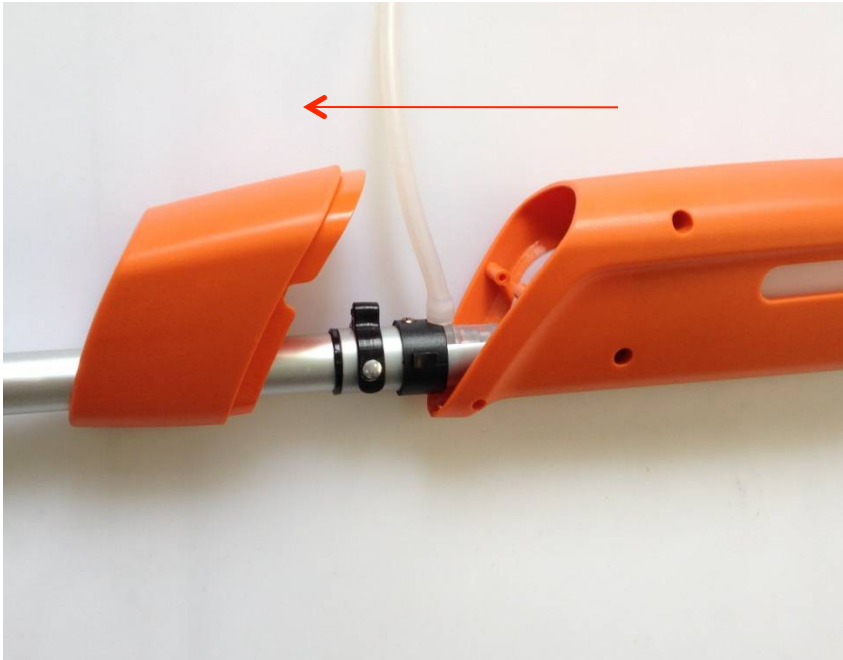

# #3: Take off the last screw upon the valve kit

You will find a screw, remove screw then slide collar away from valve.

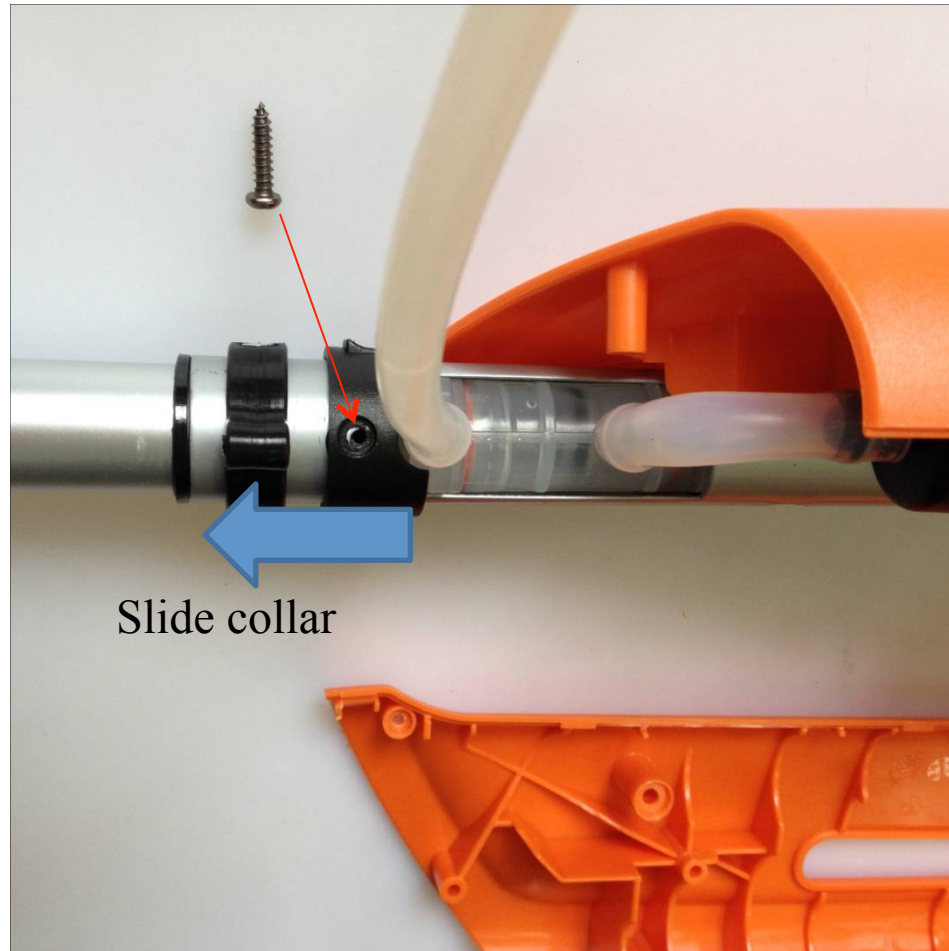

## #4: Change a new valve kit inside and assemble back

