

Metal Sanitary Napkin Receptacle 1112 Instruction Sheet

To Mount


1. Install one unit beside each toilet in the women's restroom. Mount on wall within easy reach of seated occupant at the same height as the toilet tissue dispenser.
2. Mark on wall location of two mounting screws. Start screws. Hang receptacle and tighten screws.

To Open

1. Firmly grasp front edge of receptacle lid and pull up.

To Empty

1. Place trash container below unit. Open unit. Using a gloved hand, remove liner from receptacle, fold over top of liner to seal and place liner into trash container.

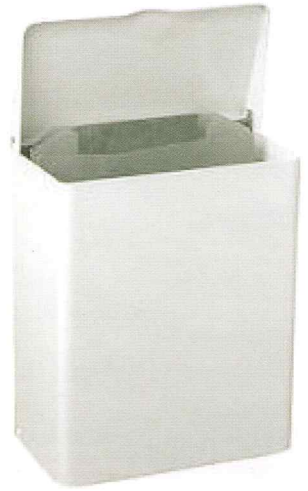

For Refill Liners, Specify #1101

ENCLOSED IS A SELF-ADHERING STICKER. PLEASE PLACE THIS STICKER ON THE TOP OR FRONT OF THE RECEPTACLE.

SAMPLES STICKER ONLY →

**PLEASE PLACE TAMPON
APPLICATOR & USED
SANITARY NAPKINS IN
THIS CONTAINER**

